

# 2013 Cadillac CTS/CTS-V Navigation System

---

<b>Infotainment System</b> .....	3	<b>Navigation</b> .....	31	If the System Needs	
<b>Introduction</b> .....	3	Using the Navigation		Service .....	58
Overview .....	3	System .....	31	Ordering Map DVDs .....	58
<b>Radio</b> .....	10	Maps .....	32	Database Coverage	
AM-FM Radio .....	10	Navigation Symbols .....	35	Explanations .....	59
<b>Audio Players</b> .....	15	Destination .....	39	<b>Voice Recognition</b> .....	59
CD/DVD Player .....	15	Configure Menu .....	48	Speech Recognition .....	59
MP3 .....	20	Global Positioning		<b>Trademarks and Licence</b>	
Hard Drive Device (HDD) .....	24	System (GPS) .....	56	<b>Agreements</b> .....	60
Auxiliary Devices .....	28	Vehicle Positioning .....	57	<b>Index</b> .....	i-1
		Problems with Route			
		Guidance .....	58		



## Introduction



The names, logos, emblems, slogans, vehicle model names, and vehicle body designs appearing in this manual including, but not limited to, GM, the GM logo, CADILLAC, the CADILLAC Crest& Wreath, and the name CTS are registered trademarks of General Motors LLC., its subsidiaries, affiliates, or licensors.

The information in this manual supplements the owner manual.

This manual describes features that may or may not be on your specific vehicle either because they are options that you did not purchase or due to changes subsequent to the printing of this owner manual. Please refer to the purchase documentation relating to your specific vehicle to confirm each of the features found on your vehicle.

Keep this manual with the owner manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.

## Overview

Read this manual thoroughly to become familiar with how the navigation system operates.

The navigation system includes navigation and audio functions.

Keeping your eyes on the road and your mind on the drive is important for safe driving. The navigation system has built-in features intended to help with this by disabling some features when driving. A greyed-out function is not available when the vehicle is moving.

All functions are available when the vehicle is parked. Do the following before driving:

- Become familiar with the navigation system operation, buttons on the faceplate and touch-sensitive screen buttons.

## 4 Infotainment System

---

- Set up the audio by presetting favourite stations, setting the tone, and adjusting the speakers.
- Set up the navigation features, such as entering an address or a preset destination.
- Set up phone numbers in advance so they can be called easily by pressing a single button or a single voice command for navigation systems equipped with phone capability.

### **WARNING**

Taking your eyes off the road too long or too often while using the navigation system could cause a crash and you or others could be injured or killed. Focus your attention on driving and limit glances at the moving map on the navigation screen. Use voice guidance directions whenever possible.

Use the navigation system to:

- Plan a route.
- Select a destination using various methods and choices.
- Follow turn-by-turn route and map guidance with voice prompts, only if permitted by traffic laws, controls, and conditions.
- Receive RDS broadcast announcements.


Always be alert and obey traffic and road laws and instructions, regardless of the guidance from the navigation system. Because the navigation system uses street map information that does not include all traffic restrictions or the latest road changes, it may suggest using a road that is now closed for construction work or a turn that is prohibited by signs at a crossroads. Always evaluate whether following the system's directions are safe and legal for the current conditions.

When the navigation system is turned on, a screen may appear with information that must be read and acknowledged before accessing some navigation features.

After acknowledging the start-up information, the NAV (Navigation) and DEST (Destination) functions are accessible. Information can now be entered or deleted, and other functions accessed. See instructions later in this section.

Every 50 times the vehicle is started and the navigation system is turned on, the Caution screen appears. After reading the caution, select OK to load the map information. If OK is not selected, all buttons except for NAV (Navigation) and DEST (Destination) can be accessed.

When getting started, set your preferences or delete information in the navigation system using various options.

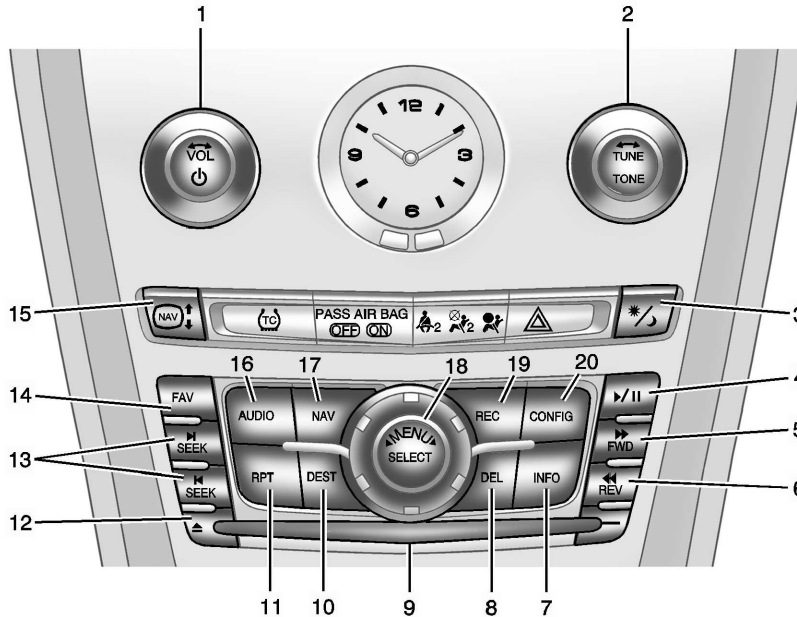

1. VOL / ⏻ (Volume/Power)
2. TUNE/TONE
3. ★/⧵ (Dimming Change)
4. ▶/|| (Play/Pause)
5. ▶▶ FWD (Forward)
6. ◀◀ REV (Reverse)
7. INFO (Information)
8. DEL (Delete)
9. CD/DVD Slot
10. DEST (Destination)
11. RPT (Repeat)
12. ▲ (Eject)
13. ▶ SEEK/◀ SEEK
14. FAV (Favourite)
15. NAV ↑↓ (Navigation Screen Up/Down)
16. AUDIO
17. NAV (Navigation)

## 6 Infotainment System

---

18. ◀ MENU ▶ SELECT
19. REC (Record)
20. CONFIG (Configure)

### Language

The vehicle supports different languages for the radio and navigation displays. If you wish to change the display language from what the system is currently set for, see “Vehicle Personalisation” in the vehicle owner manual.

If you select a language that is not supported by the navigation system, the navigation system will default to its last used language.

If the language is changed from English to a different language, the majority of the voice guidance prompts and the screen text will change to the selected language.

### English and Metric Unit Conversion


To change the display readings between English and metric units, see “Driver Information Centre” in the vehicle owner manual for more information.

### Deleting Personal Information

This navigation system can record and store destinations and personal information such as names and addresses. When disposing of the vehicle, you may want to delete this information. See “Previous Destinations — Deleting” and “Address Book — Editing and Deleting Entries” under *Destination on page 39* for deleting this information.

### Storing Radio Station Presets

Up to 36 preset stations can be stored. AM and FM can be mixed. To store presets:

1. Press VOL/  to turn the system on.

2. If viewing a map screen, press AUDIO, FAV or the source screen button.
3. Select the band.
4. Seek or tune to the desired station, to select the station.
5. Press and hold one of the preset screen buttons for more than one and a half seconds.
6. Repeat the steps for each preset.

To change the number of preset pages, see “Number of Preset Pages” under *AM-FM Radio on page 10* for more information.

### Entering an Address and Point of Interest and Storing Preset Destinations

 
The vehicle must be in P (Park) to perform these operations.


### Entering an Address

If having trouble finding a city or a street name:

- Enter the street name first instead of the city name, or vice versa.
- Enter more characters or reduce the amount of characters to reduce or expand the available options.

To set a destination by entering a street name:

1. Press VOL/  to turn the system on.
2. A caution may appear. Press the OK screen button to proceed.
3. Press DEST.
4. Select the Street screen button.
5. The Street name category is automatically selected for entry. Start entering the street name.

It is recommended that directional information or street type is not entered, and use the Space screen button between street or city names. Use the backspace  screen button if an incorrect character has been entered.

If four or less names are available for the entered characters, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available streets. Press the List screen button to view the list and select a street.

While the Street name category is empty, there is a Last 5 Streets screen button that displays the last five selected streets. Press this button to select a street from the list.

6. Enter the house number. The system displays the house number range that is available for the street.
7. If there is more than one city, the list of cities that have that street name and house number displays. Select a city from the list.
8. A confirmation screen displays with the address. If the address is correct, press the Go screen button. The system calculates the route.
9. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
10. Press the Start Guidance screen button. The route is now ready to be started.


See “Address Entry” under *Destination on page 39* for more information.

## 8 Infotainment System

---

### Entering a Point of Interest (POI)

To set a destination by entering a Point of Interest (POI):

1. Press VOL/  to turn the system on.
2. A caution may appear. Press the OK screen button to proceed.
3. Press DEST.
4. Press the Point of Interest screen button.
5. Enter the specific title of the POI in the POI name space.


If four or less names are available, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available POI names. Press the List screen button to view the list. Select the POI.

6. Press the Go screen button. The system calculates the route.

7. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
8. Press the Start Guidance screen button. The route is now ready to be started.

See “Point of Interest (POI)” under *Destination on page 39* for more information.

### Storing Preset Destinations

1. Press VOL/  to turn the system on.
2. A caution may appear. Press the OK screen button to proceed.
3. Press DEST.
4. Enter a destination. See *Destination on page 39* for information on how to enter a destination.
5. Press the Add screen button from the map screen to add the current final destination to the address book.

The address book screen appears.

6. Press the Name screen button. An alpha-keyboard displays. Enter the name.
7. Press and hold one of the screen buttons at the bottom of the screen until the text in the button changes.


The address book entry name appears in that preset destination screen button and is now available to select from the Select Destination screen. See “Using the Stored Preset Destinations” next in this section to select it as a destination.

See “Preset Destinations — Adding or Changing” under *Destination on page 39* for more information on how to add preset destinations.



## Using the Stored Preset Destinations

These destinations are available for selection while driving.

1. Press VOL/  to turn the system on.
2. A caution may appear. Press the OK screen button to proceed.
3. Press DEST.
4. Select one of the available preset destination screen buttons. The system calculates the route.
5. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
6. Press the Start Guidance screen button. The route is now ready to be started.

See “Preset Destinations — Adding or Changing” under *Destination on page 39* for more information.

## Cancelling Guidance

Guidance is cancelled once you arrive at the final destination. To cancel guidance prior to arrival at the final destination:

1. Press DEST.
2. Press the Cancel Guidance screen button.
3. Press the Yes screen button to confirm cancellation.

## Voice Guidance

To adjust the volume of voice guidance prompts:

1. Press CONFIG to enter the menu options, then press CONFIG until Nav is selected or press the Nav screen button.
2. Press the Voice Volume screen button.

3. Press the + or - screen buttons to increase or to decrease the volume of the voice prompts.

See “Voice Volume ” under *Configure Menu on page 48* for more information.

## Cleaning the Display

**Notice:** Using abrasive cleaners when cleaning glass surfaces could scratch the glass. Use only a soft cloth and do not spray cleaner directly on the system as it could affect the mechanical parts.

Do not wipe the panel with a hard cloth or use a volatile liquid such as thinner or alcohol, it could scratch the surface or erase the characters.

### Radio

#### AM-FM Radio

#### Playing the Radio

##### VOL/ (Volume/Power):

1. Press to turn the audio system on and off.
2. Turn to increase or decrease the volume.

##### TUNE/TONE:


1. Turn to go to the next or previous frequency.
2. Press to display the Sound menu. See "Sound Menu" in this section.

##### AUDIO:

1. Press to display the full audio screen.

2. Press to switch between AM and FM, CD, DVD, HDD, and AUX (auxiliary input), or press the appropriate screen button. See *CD/DVD Player on page 15*, *Hard Drive Device (HDD) on page 24*, and *Auxiliary Devices on page 28*.


#### Finding a Station

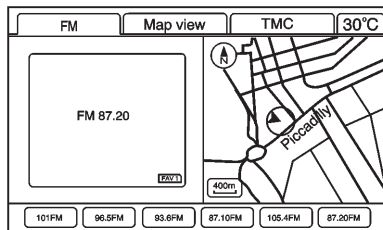

#### FM Source Shown, Other Sources Similar

If viewing a map screen, press the source screen (AM, FM, etc.) button. The display splits between


the audio screen and the map screen. All station-changing functions can be performed from this screen.

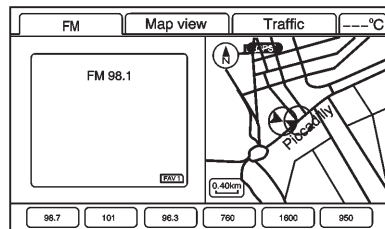

#### FM Source Shown, Other Sources Similar

Press NAV to view a split screen while on a map screen.

**AM/FM:** Select the source (AM or FM) or press AUDIO repeatedly until the desired source is highlighted.

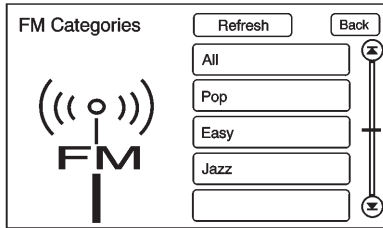

**FM Source Shown, Other Sources Similar**

1. Press the button in the middle of the screen, to receive a list of all of the selected band stations in the area.
2. Use the up and down arrows to scroll the frequencies.
3. Select the frequency.

**Refresh:** Press to refresh the list of AM and FM stations.

FM lists may also contain a category to select if stations in the area, support Radio Data Systems (RDS).

**▶ SEEK or ◀ SEEK:**

Press ▶ SEEK or ◀ SEEK to go to the next or previous station and stay there.

**Storing Radio Station Presets**


This feature allows storage of up to 36 preset stations. You can mix AM or FM. To store presets:

1. Press VOL/ ⏻ to turn the system on.
2. If viewing a map screen, press the source screen button, press AUDIO or FAV.
3. Select the band.
4. Seek or tune to the desired station, to select the station.
5. Press and hold one of the preset screen buttons for more than one and a half seconds.

6. Repeat the steps for each preset.

To change the number of preset pages, see “Number of Preset Pages” in this section.

**Sound Menu**

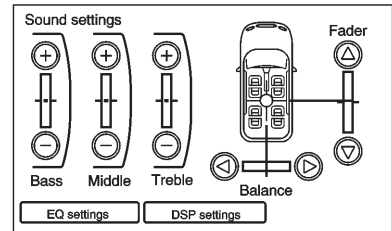

**TONE or CONFIG**

**(Configuration):** Press TONE or CONFIG to access the Sound menu to adjust the treble, midrange, bass, fade, balance and Digital Signal Processing (DSP).

## 12 Infotainment System

**TREBLE:** Press the + or - sign to increase or decrease. If a station is weak or has static, decrease the treble.

**MID (Midrange):** Press the + or - sign to increase or decrease.

**BASS:** Press the + or - sign to increase or decrease.

### Adjusting the Speakers

**L/R (Left/Right) (Balance):** To adjust the balance between the left and the right speakers, press and hold the L or R screen buttons.

**Front/Rear (Fade):** To adjust the fade between the front and the rear speakers, press and hold the Front or Rear screen buttons.

### EQ Settings

The EQ (equalisation) settings are selected through the sound menu. Press the EQ Settings screen button to display the selection of Talk or Manual.

### Digital Signal Processing (DSP)

If the system has Digital Signal Processing (DSP), it is used to provide a choice of different listening experiences. DSP can be used while listening to the audio system. The type of DSP selected is displayed on the status screen.

DSP settings:

**Normal:** Adjusts the audio to normal mode. This provides the best sound quality for all seating positions.


**Driver:** Adjusts the audio to give the driver the best possible sound quality.

**Rear:** Adjusts the audio to give the rear seat occupants the best possible sound quality.

**Centerpoint®:** Turns on Bose® Centerpoint. Centerpoint produces a full vehicle surround sound listening experience from a CD, MP3/WMA, DVD or AUX (auxiliary) input stereo digital audio source and delivers five independent audio channels from

the conventional two channel stereo recordings. This is not available for AM or FM. For more details visit [www.bose.com/centerpoint](http://www.bose.com/centerpoint).

### Radio Menu

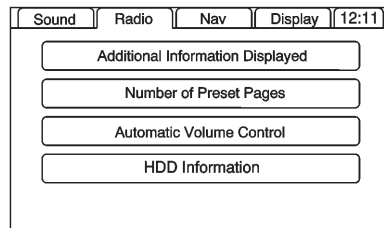

Press CONFIG to enter the menu screen, then press CONFIG repeatedly until Radio is selected or press the Radio screen button to make radio system changes.

### Additional Information Displayed

- Press Additional Information Displayed to turn station or channel information on or off.
- Press On to receive FM radio text information, when it is available.
- Press Off to disable this feature.

### Number of Preset Pages

Press the Number of Preset Pages screen button to change the number of preset pages, 1 through 6. Each preset page can contain six preset stations. Press the desired numbered screen button.

**Automatic Volume Control:** Bose equipped vehicles include Bose AudioPilot® noise compensation technology.

When turned on, AudioPilot continuously adjusts the audio system equalisation, to compensate for background noise, so that the music always sounds the same at the set volume level.

This feature is most effective at lower volume settings where background noise can affect how well the music is heard while being played through the vehicle's audio system. At higher volume settings, where the music is much louder than the background noise, there may be little or no adjustments by AudioPilot. For additional information on AudioPilot, visit [www.bose.com/audiopilot](http://www.bose.com/audiopilot).

To use AudioPilot®:

1. Press CONFIG to enter the menu screen, then press CONFIG repeatedly until Radio is selected or press the Radio screen button
2. Press Automatic Volume Control to access the AudioPilot menu.
3. Press the ON screen button.

To turn off, press OFF.

### RDS Settings

Press this screen button to display the RDS settings screen to customise various RDS features.

**AF (Alternate Frequency):** Press the ON or OFF screen button next to this feature, to turn this feature on or off.

With this feature enabled, the audio system can search for a stronger station in the network when a current station gets too weak for listening. The system will automatically switch to the station with the stronger signal.

**REG (Region):** Press the ON or OFF screen button next to this feature, to turn this feature on or off.

With this feature enabled, the RDS alternate frequency search is restricted to network stations within the same region as the current station.

## 14 Infotainment System

---

**TA (Traffic Announcement):** Press the ON or OFF screen button next to this feature, to turn this feature on or off.

With this feature enabled, the radio will search for stations that broadcast traffic announcements.

If the audio system turns to a related network station for a traffic announcement, it will return to the original station when the announcement is finished.

This feature is only available for use when the radio is set to the FM band or when the CD/DVD audio source is active.

**TA VOLUME (Traffic Announcement Volume):** While a traffic announcement plays, the system uses a special type of volume called TA Volume.

This menu option allows you to set the volume level of the traffic announcements you receive from the system. Press the - or + button to increase the volume.

Press the Back screen button to return to the previous screen.

### Timeshift

Timeshift records all information from AM, FM, etc. for up to an hour. Timeshift allows you to listen to information that was missed. Once starting to listen to one of the bands, timeshift automatically starts. Once timeshift has recorded for an hour, it will keep recording and start removing the information from the beginning.

Press ▶/|| (pause) to stop hearing the information through the speakers. During this pause time, timeshift keeps recording. Press ▶/|| (play) to continue listening where you left off. During pause, a progress bar displays, to show how much time the system has been buffering.

Press ▶/|| before turning the vehicle off so that Timeshift keeps recording for up to one hour. If the vehicle is still off after an hour of recording, the vehicle stops recording and all information is lost.

If stations are switched, during this hour period, timeshift erases all information that was recorded and starts recording from the current band. If you switch to listening to any other source, timeshift will not record.

## Audio Players

### CD/DVD Player

#### Playing a CD


The player can be used for CD, MP3, and DVD audio and DVD video.

Things to know about playing a CD:

- With the ignition on, insert a CD or DVD partway into the slot, label side up. The player pulls it in and the CD or DVD should begin playing. While playing a CD or DVD, the navigation system is available. If you insert a CD or DVD with the system off and the ignition on, it starts to play.
- When a CD or DVD is inserted, Gracenote logo display starts with the Gracenote database access and the CD/DVD tab activates.

- The player is only compatible with CDs or DVDs of the appropriate region code that is printed on the jacket of most CDs and DVDs.
- The CD/DVD slot is compatible with most audio CDs, CD-R, CD-RW, DVD-Video, DVD-Audio, DVD-R/RW, DVD +R/RW media along with MP3 and WMA “un-protected” formats.
- As each new track of a CD starts to play, the track number displays.
- The player can only play the full-size (12 cm) discs.
- If an error displays, see “CD/DVD Messages” later in this section.

#### Playing an Audio CD

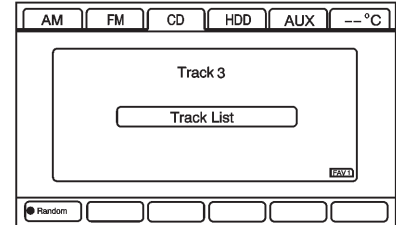

#### RANDOM:

1. Press to hear the tracks in random, rather than sequential, order.
2. Press again to turn off random play.

### ▶ / || (Play/Pause):

1. Press to pause the CD, the pause symbol displays. This button will then change to the play button.
2. Press the play button to play the CD.

### ◀◀ REV (Rewind):

1. Press and hold to rewind quickly through a track selection. A sound is heard at a reduced volume.
2. Release to stop rewinding. The display shows the elapsed time of the track.

### ▶▶ FWD (Forward):

1. Press and hold to fast forward quickly through a track selection. A sound is heard at a reduced volume.
2. Release to stop fast forwarding. The display shows the elapsed time of the track.

### ▶| SEEK or ◀| SEEK:

1. Press ▶| SEEK to go to the next track.
2. Press ◀| SEEK to go to the start of the current track if more than five seconds have played or to the previous track if five seconds or less have played.
3. If either button is pressed more than once, the player continues moving backwards or forwards through the CD. The sound mutes while seeking.

**TUNE/TONE knob:** Turn to go to the next or previous track.

**Track List Screen:** Press the centre button on the main screen to go to the Track List Screen. Press the screen button to select a different song to play from the disc.

### Playing a DVD

There are two ways to play a DVD:

- Once a DVD is inserted, the system automatically starts play of the DVD.
- Press the AUDIO button, then press the DVD screen button.


### VOL/ ⏻ (Volume/Power):

1. Press to turn the system on and off.
2. Turn to increase or decrease the volume of the audio system.

### DVD Menu Options

Once a DVD starts to play, the menu options automatically appear. To display the menu choices while a DVD is playing in full screen, press anywhere on the screen.



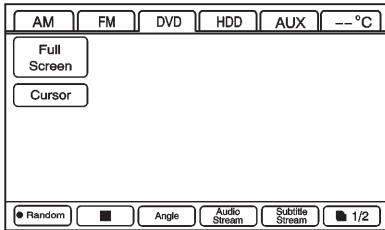


There are two pages of menu options. Press the page number screen button, located in the bottom right corner of the screen, to use all of the menu screen buttons. Menu options are available when they are highlighted. Some menu options are only available when the DVD is not playing.

**Full Screen:**

1. Press to remove all menu options from the display.
2. Press anywhere on the screen to display the menu options.

**Cursor:** Press to access the cursor menu. The arrows and other cursor options allow navigation of the DVD menu options. The cursor menu options are only available if a DVD has a menu.

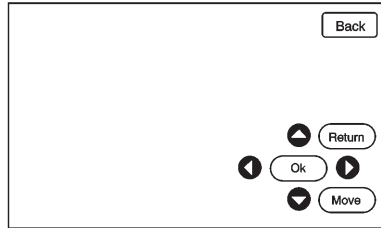

**◀, ▲, ▶, ▼ (Arrow Buttons):** Use these arrow buttons to move around the DVD menu.

**Enter:** Press to select the highlighted option.

**Return:** Press to go back to the previous DVD menu.

**Back:** Press to go back to the main DVD display screen.

**Move:** Press to move the cursor buttons back and forth from the bottom-right corner to the top-left corner of the screen.

**Random:**

1. Press to hear the tracks in random, rather than sequential, order.
2. Press Random again to turn off random play. This button is not available for DVD video.

**■ (Stop):**

1. Press to stop play of the DVD.
2. Press ▶/|| (play/pause) to continue playing the DVD from where the DVD was stopped.
3. Press twice to return to the beginning of the DVD.

## 18 Infotainment System

---

### ▶/|| (Play/Pause):

1. Press to pause the DVD.
2. Press again to play the DVD from where the DVD was stopped.

### Angle:

1. Press to adjust the viewing angle of the DVD.
2. Repeatedly press to toggle through the angles. This button is not available when the DVD is stopped. This may not be available on all DVDs.

### Audio Stream:

1. Press to display the audio stream number and to change the language heard.
2. Repeatedly press to toggle through the available languages. This may not be available on all DVDs. This button is not available when the DVD is stopped.


### Subtitle Stream:

1. Press to playback the video with subtitles.
2. Repeatedly press this button to toggle through the available languages.
3. To turn the subtitles off, press until Off is selected. This button is not available when the DVD is stopped. This may not be available on all DVDs.

**Top Menu:** Press to display the first menu of the DVD. This button is not available on all DVDs.

**Menu:** Press to display the DVD menu of the current area of the DVD that is playing. This button is not available for DVD audio.

**Keypad:** Press to display the title/ chapter, the group/track, or the menu number screen; type in the appropriate number on the keypad.

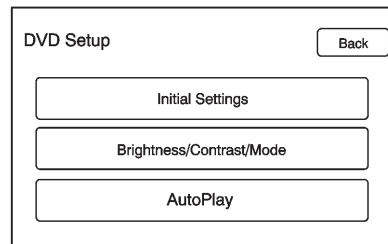

**Setup:** Press to display the DVD Setup screen. The DVD Setup screen allows you to change the initial settings; language and aspect, to change the brightness, contrast, and mode, and to change autoplay. The initial settings and auto play are only available when the DVD is not playing.

## Initial Settings

From the DVD Setup screen, press to change audio, subtitle, and menu languages, and to view the aspect of the DVD. The movie must be stopped to use this menu. These settings are not available on all DVDs.

**Audio Language:** Press one of the listed languages to change the language that you are listening to.


**Subtitle Language:** Press one of the listed languages to change the language of the subtitles.


**Menu Language:** Press one of the listed languages to change the language of the menus.

**Aspect:** Press to change the aspect ratio of the DVD. This may not be available on all DVDs.

## Brightness/Contrast/Mode

From the DVD Setup screen, press to change the brightness, contrast, and mode of the screen while playing a DVD.

 **(Brightness):** Press the up or down screen arrows to increase or decrease the brightness of the DVD screen.

 **(Contrast):** Press the up or down screen arrows to increase or decrease the contrast of the DVD screen.


**Auto (Automatic):** Press to automatically adjust the navigation screen background depending on exterior lighting conditions.


**Night:** Press to make the navigation screen background darken.

**Day:** Press to make the navigation screen background brighter.

## Autoplay

From the DVD Setup screen, press to turn autoplay on or off. When on, if the DVD has stayed in the menu, it begins playing the movie after the menu displays for five seconds. This may not be available on all DVDs.

 **SEEK (Next Track/Chapter):** Press to go to the next track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

 **SEEK (Previous Track/Chapter):** Press to return to the start of the current track or chapter. Press this button again to go to the previous track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

**TUNE/TONE Knob:** Turn to go to the next or previous track/chapter.

## CD/DVD Messages

If Disc Read Error displays and/or the CD/DVD comes out, it could be for one of the following reasons:

- If a disc was inserted with an invalid or unknown format.
- If the disc is not from a correct region.

- It is very hot. When the temperature returns to normal, the disc should play.
- You are driving on a very rough road. When the road becomes smoother, the disc should play.
- The disc is dirty, scratched, wet, or upside down.
- The air is very humid. If so, wait about an hour and try again.
- There may have been a problem while burning the disc.
- The label may be caught in the CD/DVD player.

If the CD/DVD is not playing correctly, for any other reason, try a known good disc.

If any error occurs repeatedly or if an error cannot be corrected, contact your dealer.

### MP3

#### Using an MP3 CD and DVD

##### MP3 Format

There are guidelines that must be met, when creating an MP3 disc. If the guidelines are not met when recording a CD-R(W), the CD may not play. The guidelines are:

- Sampling rate: 8 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, and 48 kHz.
- Bit rates supported: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 144, 160, 192, 224, 256, and 320 kbps.
- ID3 tag information is displayed by the radio if it is available. The radio will display a filename, song name, artist name, album name, and directory name.
- Maximum number of folders is 255 with a maximum hierarchy of eight folders.

- Create a folder structure that makes it easy to find songs while driving. Each folder or album should contain 18 songs or less.
- It is recommended that there are a maximum of 1024 files on a disc.
- The files can be recorded on a CD-R or CD-RW with a maximum capacity of 700 MB.

##### Root Directory

The root directory is treated as a folder. If the root directory has compressed audio files, the directory displays as DISC. All files contained directly under the root directory are accessed prior to any root directory folders. However, playlists can always be accessed before root folders or files.

### Empty Directory or Folder

If a root directory or a folder exists somewhere in the file structure that contains only folders/subfolders and no compressed files directly beneath them, the player advances to the next folder in the file structure that contains compressed audio files and the empty folder will not be displayed or numbered.

### No Folder

When the CD contains only compressed files, the files are located under the root folder. The next and previous folder functions have no function on a CD that was recorded without folders or playlists. When displaying the name of the folder the radio displays DISC.

When the CD contains only playlists and compressed audio files, but no folders, all files are located under the root folder. The left and right arrow buttons search playlists (Px) first and then goes to the root folder.

When the radio displays the name of the folder the radio displays DISC.

### Order of Play

Tracks are played in the following order:

- Play begins from the first track in the first playlist and continues sequentially through all tracks in each playlist. When the last track of the last playlist has been played, play continues from the first track of the first playlist.
- If the CD does not contain any playlists, then play begins from the first track under the root directory. When all tracks from the root directory have been played, play continues from files according to their numerical listing. After playing the last track from the last folder, play begins again at the first track of the first folder or root directory.

When play enters a new folder, the display automatically shows the new folder name. The new track name displays.

### File System and Naming

The song name that displays is the song name contained in the file. If the song name is not present in the file, then the radio displays the file name with the extension (such as .mp3) as the track name.

### Preprogrammed Playlists

Preprogrammed playlists which were created by WinAmp™, MusicMatch™, or Real Jukebox™ software can be accessed, however, there is not editing capability. These playlists are treated as special folders containing compressed audio song files.

## 22 Infotainment System

### Playing an MP3

With the ignition on, insert an MP3 CD partway into the slot, label side up. The player pulls it in and the MP3 should begin playing. While playing an MP3, the navigation system is available. If an MP3 is inserted with the system off and the ignition on, it starts to play.

When an MP3 CD is inserted, the MP3 tab activates.


If the ignition or radio is turned off with an MP3 CD in the player, it stays in the player. When the ignition or radio is turned on, the MP3 CD starts playing where it stopped, if it was the last selected audio source.

As each new track starts to play, the track number displays.

If an error displays, see “CD/DVD Messages” in this section.

If viewing a map screen, press the MP3 screen button. The display splits between the audio screen and the map screen. If no split screen is

wanted or if not on a map screen, press AUDIO, then press AUDIO again until MP3 is selected or press the MP3 screen button.

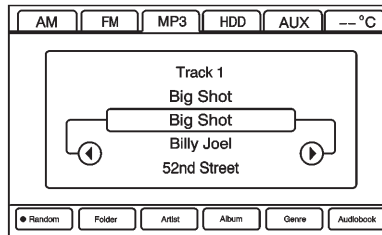

### || / ► (Pause/Play):

1. Press to pause the CD, the pause symbol displays. This button then changes to the play button.
2. Press the play button to play the CD.

### Random:

1. Press to hear the disc played in random (tracks and folders) order.
2. Press the Random screen button to turn off random play.

### ◀◀ REV (Rewind):

1. Press and hold to rewind quickly through a track selection. A sound is heard at a reduced volume.
2. Release this button to stop rewinding. The display shows the elapsed time of the track.

### ▶▶ FWD (Forward):

1. Press and hold to fast forward quickly through a track selection. A sound is heard at a reduced volume.
2. Release this button to stop fast forwarding. The display shows the elapsed time of the track.

**TUNE/TONE Knob:** Turn to go to the next or previous track.

◀▶ **(Category):** Select the left or right arrow to go to the previous or next folder/Artist/Album/Genre on the disc.

▶| **SEEK** or ◀| **SEEK:**

1. Press ▶| SEEK to go to the next track.
2. Press ◀| SEEK to go to the start of the current track if more than five seconds have played or to the previous track if five seconds or less have played.
3. If either button is pressed more than once, the player will continue moving backwards or forwards through the CD. The sound mutes while seeking.

**Music Navigator:** Press the centre button on the main screen to display Music Navigator.

Selecting any of the following screen buttons, when in MP3, displays the Music Navigator screen for each of the following categories:

- **All Songs** : Press this to view all songs stored on the DISC. Select a song name from that list. It may take a few minutes for the system to show the list. Once a song has been selected from this category, the song name will appear in the centre button on the main screen.
- **Folder** : Press to view the folders that have been stored on the DISC. Select a folder name to view all songs in this folder, select a song. It may take a few minutes for the system to show a list. Once a song has been selected from this category, the folder name appears in the centre button on the main screen to show that music is being played from a specific folder.
- **Artist** : Press to view the artists that have been stored on the DISC. Select an artist name to view all songs on that list, select a song. It may take a few minutes for the system to show the list. Once a song has been selected from this category, the artist name appears in the centre button on the main screen to show that music is being played from a specific artist.
- **Album** : Press to view the albums that have been stored on the DISC. Select an album name to view all songs on that list, select a song. It may take a few minutes for the system to show the list. Once a song has been selected from this category, the album name appears in the centre button on the main screen to show that music is being played from a specific album.

- **Genre** : Press to view the genres that have been stored on the DISC. Select a genre name to view all songs on that list, select a song. Once a song has been selected from this category, the genre name appears in the centre button on the main screen to show that music is being played from a specific genre.

### Hard Drive Device (HDD)

With a hard drive device you are able to record songs from your CD player or a mass media storage device connected by a USB connector. The hard drive has at the most 9 GB memory capacity for storage of media files.

The types of formats supported by the HDD are:

- MP3
- MP3-PRO (with Spectral Band Replication)
- WMA

- AAC
- OGG Vorbis

### Recording from a CD

To record all tracks:

1. Load a CD.
2. Press REC.
3. A confirmation window is displayed. Select Yes to record all tracks; select No to cancel the operation.

A progress bar displays if Yes was selected.

To record selected tracks:

1. Load a CD.
2. Press the Track List screen button, located in the middle of the screen.
3. Highlight the songs from the Music Navigator screen.
4. Press REC.

5. A confirmation window is displayed. Select Yes to record this track; select No to cancel the operation.

A progress bar displays if Yes was selected.

While recording a CD to the HDD, if the system is turned off, the recording process stops. When the system is turned back on, the recording process will not continue.

### Recording from a USB Device

To record all tracks:

1. Connect a USB device.
2. Press REC.
3. A confirmation window is displayed. Select Yes to record all tracks; select No to cancel the operation.

A progress bar displays if Yes was selected.




To record selected tracks:

1. Connect a USB device.
2. Press the USB screen button, located in the middle of the screen.
3. Select the media from the Music Navigator screen.
4. Press REC.
5. A confirmation window is displayed. Select Yes to record this track; select No to cancel the operation.

A progress bar displays if Yes was selected.

While recording a USB device to the HDD, if the system is turned off, the recording process stops. When the system is turned back on, the recording process will not continue.

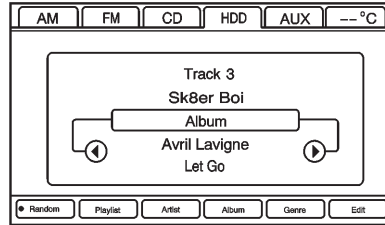

**Edit:** For tracks recorded from CD audio discs to the HDD, it displays “Multi Hit” on the screen when the music information of two or more that is the same as the current album is retrieved from the Gracenote database stored in the radio. Then if the Edit button is pressed, you can specify it for one from the multi hit list that is generated based on the Gracenote database.

**Random:**

1. Press to play the songs stored on the HDD in random, then sequential order.
2. Press again to stop random play.

**DEL (Delete):**

1. Select a song from one of the Music Navigator screens or you must be listening to a song to delete it. Press the DEL button.
2. Select a category from the Music Navigator screen and press DEL to delete an entire category.

**▶/|| (Play/Pause):**

1. Press this button for playback of any media source that had been currently playing at the point of where it was stopped.
2. Press it again to pause the currently playing media source.

**TUNE/TONE:** Turn to go to the next or previous track.

### ► SEEK or ◀ SEEK:

1. Press ► SEEK to go to the next track.
2. Press ◀ SEEK to go to the start of the current track if more than five seconds have played or to the previous track if five seconds or less have played.
3. If either button is pressed more than once, the player continues moving backwards or forwards through the HDD. The sound mutes while seeking.

### ◀▶ (Category):

1. Select the left or right arrow to go to the previous or next Album/Playlist/Artist/Genre on the HDD.
2. Press the centre button on the main screen to display Music Navigator.

### Music Navigator Screen

Selecting any of the following screen buttons, when in HDD, displays the Music Navigator screen for each of the following categories.

#### All Songs:

1. Press to view all songs stored on HDD.
2. Select a song name from that list. It may take a few minutes for the system to show the list. Once a song has been selected from this category, the song name will appear in the centre button on the main screen.

#### Playlists:

1. Press to view the playlists that have been stored on the HDD.
2. Select a playlist name to view all songs that have been stored in this list, select a song. Once a song has been selected from this category, the "Playlist"

appears in the centre button on the main screen to show that music is being played in this mode.

Under the playlist category, there is a submenu button called, More Like This.

1. Press this button to see a playlist of songs similar to the current song is generated by music recognition technology and related data that are provided by Gracenote.
2. Select a song to listen to after the list is created.
3. Press the Refresh screen button to generate the new list.

Once a song has been selected from this category, the "AutoPlay" appears in the centre button on the main screen to show music is being played in this mode.

**Artists:**

1. Press to view the artists that have been stored on the HDD.
2. Select an artist name to view all songs in this list, select a song to listen to.

Once a song has been selected from this category, the "Artist" appears in the centre button on the main screen to show that music is being played in this mode.

**Albums:**

1. Press to view the albums that have been stored on the HDD.
2. Select an album name to view all songs in this list, select a song to listen to.

Once a song has been selected from this category, the "Album" appears in the centre button on the main screen to show that music is being played in this mode.

**Genres:**

1. Press to view the genres that have been stored on the HDD.
2. Select a genre name to view all songs in this list, select a song to listen to.

Once a song or book has been selected from this category, the "Genre" appears in the centre button on the main screen to show that playback is in this mode.

**Compressed Audio**

The HDD will play an MP3/WMA disc that contains compressed CD audio from all formats that are supported. By default the radio shows the CD label on the left hand side of the screen but plays all supported file formats in the order in which they were recorded to the CD.

**Background Recording**

A CD can be copied and then listened to or a CD can be recording while listening to another source such as AM, FM, HDD, or AUX. The quality of the listening experience should be the same whether recording in the background or not, and the speed of the recording process does not take any longer than normal.

Timeshift cannot be activated during the background recording function.

**Duplicate Content**

When record is executed the system checks to see if the CD has already been recorded to the hard drive. If the entire contents of the CD still exist on the hard drive the system will not record the content. If the system determines that none or only some of a CD exists, the entire CD records to the hard drive. This could result in duplicate songs.

### CD Eject

If the CD is ejected before the recording process has completed, tracks that have been completely recorded are stored to the hard drive, incomplete tracks are discarded.

### Power Mode

If the system is turned off during a CD or USB recording process, it will stop. When the radio is turned back on, the recording process needs to be started again.

### Saving HDD Favourites

During HDD playback, select one of the lower buttons to save songs in its category. Each category has six presets.

To add a song from a category, you must be listening to the song. Press and hold the lower button until "Favourite saved..." displays on the screen.

### Auxiliary Devices

The navigation system has an auxiliary input jack located in the centre console. This is not an audio output; do not plug the headphone set into the front auxiliary input jack. You can however, connect an external audio device such as an iPod, laptop computer, MP3 player, CD changer, or cassette tape player, etc. to the auxiliary input jack for use as another source for audio listening.

Drivers are encouraged to set up any auxiliary device while the vehicle is in P (Park). See "Defensive Driving" in the Index of the vehicle's owner manual for more information on driver distraction.

To use a portable audio player, connect a 1/8 inch (3.5 mm) cable to the auxiliary input jack. When a device is connected, the system detects and automatically begins playing audio from the device over the vehicle's speakers.

If a device is connected and you are listening to another source (FM, CD, MP3, etc.), press the AUDIO button then press the AUDIO button repeatedly until AUX is selected or press the AUX screen button. An auxiliary device must be connected for the AUX screen button to appear as an option to select.

The screen buttons are dependent of the type of auxiliary device that you are using.

### USB Host Support

The USB connector uses the USB 2.0.

### USB Supported Devices

- USB Flash Sticks (Pen Drives)
- Portable USB Hard Drives
- Compact Flash (or other portable media) adapters

Depending on the USB mass storage device, some devices may not be recognised. The HUB device is not supported.

## USB Playback

Music can be played directly from the USB device and controlled through the radio's MP3 control functions and the Music Navigator.

## USB Media Recording

A USB Mass Storage device such as a "pen drive" or a portable USB hard drive can be connected to the USB port to record media contents, such as compressed audio files from the USB storage device onto the HDD. The USB port is located in the centre console bin, between the Accessory Power Outlet (APO) socket and the auxiliary input jack.

In addition to recording the content from the USB storage device, content can be played back directly from the USB device.

## USB Background Recording

If the content of a USB device is chosen to be copied, these media files are copied to the hard drive. The recording process occurs in the

background and does not affect playback from any source, including the USB device itself. The quality of the listening experience should be the same whether recording in the background or not, and the speed of the recording process does not take any longer than normal.

Timeshift cannot be activated during the background recording function.

## Using the Radio Controls to Connect and Control Your iPod®

An iPod can be controlled using the radio buttons and knobs and display your iPod song information on the radio's display. To connect and control an iPod using the radio controls, the vehicle must have a USB port. If it does, it is located in the centre console bin. A special iPod connection cable is needed that came with the vehicle, from your dealer. See your dealer for more information.

This feature supports the following iPod models:

- Fifth generation or later iPod
- First or Second generation or later iPod Nano\*

\* For proper operation, make sure the iPod has the latest firmware from Apple®. The iPod firmware can be updated using the latest iTunes application. See [www.apple.com/itunes](http://www.apple.com/itunes).

To connect and control the iPod, connect one end of the special iPod connection cable that came with the vehicle to the iPod's dock connector. Connect the other end to both the USB port and the auxiliary input jack. The USB port and the auxiliary input jack are located in the centre console bin. The iPod music displays on the radio's display and begins playing through the vehicle's radio system.

A standard iPod USB cable, like the one that came with the iPod, cannot be used to connect an iPod to the vehicle. The iPod connection cable that was purchased with the vehicle or that was made available from your dealer must be used in order for this feature to work.

Use the radio ◀ MENU ▶ /SELECT knob to bring up the iPod Menu and select Songs, Artists, Albums and Playlists to play from the iPod.

The iPod charges while it is connected to the vehicle and if the vehicle is turned to ACC/ACCESSORY or ON/RUN. It can also be left connected to the vehicle while the vehicle is turned off or removed. With the vehicle turned off, the iPod automatically powers off and will not charge or draw power from the vehicle's battery.

If an older iPod model is used that is not supported or does not have the special iPod connection cable, the iPod can still be used in the vehicle by connecting it to the

Auxiliary Input Jack using a standard 3.5 mm (1/8 inch) stereo cable. See "Using the Auxiliary Input Jack" earlier for more information.

### Gracenote Database

When a CDDA is recorded from a CD to the HDD, the music information (Album name, Artist name, Song name and Genre) is retrieved from the Gracenote database, stored in the radio. The database information uses the information of Gracenote Music Recognition Service. See the owner's manual for more information on the Gracenote Database.

Gracenote Music Recognition Service, Music recognition technology, and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, visit [www.gracenote.com](http://www.gracenote.com).

### Updating the Gracenote Database

1. Turn the ignition on.
2. Press the VOL/ ⏻ button to turn the system on.
3. Insert the update disc partway into the slot, label side up. The player pulls it in.
4. Update Confirmation screen displays along with the version information. Press the Update screen button.
5. The system reboots and starts updating the database. A progress bar displays.
6. The disc automatically ejects after the update is completed. The system reboots.

## Navigation

### Using the Navigation System

This section presents basic information needed to operate the navigation system.

Use the buttons on the navigation system along with the available screen buttons on the navigation screen to operate the system. See *Overview on page 3* for more information.

Once the vehicle is moving, various functions are disabled to reduce driver distractions.

### Navigation Controls Buttons


The following buttons are on the navigation system:

#### **VOL/ (Volume/Power):**

1. Press to turn the system on and off.

2. Turn this knob to increase or decrease the volume. The volume works for the feature that is currently being used; audio, phone, voice guidance, and speech recognition changes the volume of voice prompts.

**NAV ↓ ↑ (Navigation Screen Up/Down):** Press to make the screen go up and down. In the up position, all touch-screen buttons can be viewed or used. In the down position, a portion of the screen will be shown that displays the current audio source and temperature.

**\* (Dimming Change Button):** The dimming change button on the navigation faceplate is used to toggle between these dimming modes.

**NAV (Navigation):** Press to view your vehicle's current position on the map screen. Each press of this key cycles through Full Map and the tab that displays the current audio source (AM, FM, CD, etc.). Full Map displays the screen in full map view.

Selecting the audio tab splits the screen between the map screen and the current audio source screen menu. See *Configure Menu on page 48* for more information.

**◀ MENU ▶ SELECT:** Turn the MENU/SELECT knob to highlight a feature. Press this knob to select the highlighted feature.

**CONFIG (Configure):** Press to adjust features for sound, radio, navigation, the display, and clock. See *Configure Menu on page 48* for more information.

**RPT (Navigation Repeat):** Press to repeat the last voice guidance prompt. See *Destination on page 39*.

**DEST (Destination):** Press to access the Route screen to plan a destination. If route guidance is active, press this key to access the Route screen. See *Destination on page 39* for more information.

**DEL (Delete):** Press to delete information from the hard drive. See *Hard Drive Device (HDD) on page 24* for more information.

**INFO (Information):** Press for Speech Help. See “Speech Recognition” under *Speech Recognition on page 59* for more information.

### Touch-Screen Buttons

Touch-screen buttons are on the screen. Screen buttons are highlighted when a feature is available. There are also some toggle screen buttons that highlight when active and grey-out when inactive.

### Alpha-Numeric Keyboard

Letters of the alphabet, symbols, punctuation, and numbers, when available, display on the navigation screen as an alpha or numeric keyboard. The alpha keyboard displays when the system requires entry of a name.

All characters are touch-screen buttons. Press a character to select it.

**À-Ý (Accent Alphabet):** Select letters with accent symbols.

**A-Z (Alphabet):** Select letters from the alphabet.

**0-9 (Numbers):** Select numbers.

**Sym (Symbols):** Select symbols.

**Space:** Select to enter a space between characters or the words of a name.

**◀ (Backspace):** Select if an incorrect character has been selected.

To make name selections easier, the system only highlights the characters that can follow the last one entered. For example, if a Z is entered, a T may not be available for selection.

If a name does not display after entry, it may need to be entered differently since the map database may not contain that information.

### Maps

This section includes basic information needed to know about the map database.

### Map Coverage

The maps are stored on the HDD (Hard Drive).

Map data includes the following:

- Andorra
- Austria
- Belgium
- Denmark
- Finland
- France
- Germany
- Ireland
- Italy



 
- Liechtenstein
- Luxembourg
- Monaco
- Netherlands
- Norway
- Portugal
- San Marino
- Spain
- Sweden
- Switzerland
- United Kingdom
- Vatican

If navigation mapping is operated in a region that is not covered by the stored map data, or if the vehicle is ever more than 1/10 of a kilometre from a mapped road, the system may display a compass in place of the map.


### Installing the DVD Map Disc

Your dealer installed the map database information on the HDD.


After receiving an updated map disc, it needs to be copied to the HDD. Read the following steps completely before operating this feature.

1. Turn the ignition on.
2. Press the VOL/  button to turn the system on.
3. Insert the update disc partway into the slot, label side up. The player pulls it in.
4. Update Confirmation screen displays with version information, then press the Update screen button.
5. Enter the Authentication Code, then press the Enter button.
6. If correct code is entered, the system reboots and starts updating, the status bar displays.
7. The disc is automatically ejected after the map database update is completed. The system reboots.

If the application update file is included in the disc, the application update is also done. There is a slight pause between map update and application data. The system may restart multiple times. Make sure audio has returned for at least 30 to 60 seconds before ejecting the disc.

The disc is not automatically ejected, press the  button after the application update is completed.

### Ejecting the DVD Map Disc

When the map disc has finished copying to the HDD, press the  button.

### Handling the DVD Map Disc

When handling the DVD map disc, be careful of the following:


- Handle the disc very carefully to avoid contamination or flaws. Signals may not read out properly if the disc gets contaminated or flawed.

- If the disc gets soiled, use a soft cloth to gently wipe it out from the centre of the disc to the outside. Do not use photographic record cleaner, solvents, or other cleaners.
- Do not use the disc to rest on while writing or drawing using any writing utensil or attach a seal to any of the sides or the disc.
- Do not keep the disc in direct sunlight, high temperatures, or humidity.
- After using the disc, replace it in the original case.

### Map Adjustments

The scale of view on the map can be adjusted. Also, the map moves automatically based on the direction the vehicle is travelling.

### Map Scales

 **(Zoom In/Zoom Out):** Press the zoom in or out screen buttons or the scale on the bar to change the level of map detail. The scale appears on the screen once the zoom in or zoom out screen buttons are selected. The system adjusts the map accordingly. The scale of a map can range from 50 m (1/32 mi) to 550 km (350 mi). To change from English or metric, see “DIC Operation and Displays” in the owner manual.

### Scrolling the Map



Press anywhere on the map screen and the scroll symbol appears. Use this feature to move across the map.

Touch-tap your finger in any direction on the map screen and the map continues to scroll in that direction. The rate of scrolling depends on where the screen is being pressed. The rate increases when pressing closer to the edge of the screen.

If using the scroll feature, touch-tap the map and the vehicle icon becomes lost, press NAV to return to the current vehicle location on the map.

When scrolling on the map, the system displays the address of the scroll symbol location.

You can use the scroll feature on the map to set a destination. See “From Map” under *Destination on page 39*.

When scrolling on the map without a planned route, press the Go screen button to calculate the route from your current position to the destination mark.

## Navigation Symbols

The following symbols are the most common symbols that appear on a map screen.



Your vehicle is shown as this symbol. It indicates the current position and heading direction of the vehicle on the map.



The destination symbol appears on the map, after a route has been planned, marking the final destination.



The waypoint number displays on the map after a stopover has been added to your route.

A waypoint is a series of two or more marked stopovers on the way to the final destination. This feature allows you to add up to three waypoints to the current route, between your start point and final destination. Once a waypoint has been added, the points can be edited or deleted.



The distance to crosshairs indicates the distance to the crosshair area displayed on the map screen during map scrolling.



This symbol only appears when time is not available.



The distance and time to destination symbol indicates the distance and the estimated time remaining to the final destination or arrival time, depending on the option selected.

Press this screen button to change between viewing the time of day and the arrival time. If waypoints have been added to the current route, each waypoint destination appears giving the same information.



Select this screen symbol to switch between North Up, Heading Up, and 3-D modes.

This north up symbol indicates the map with North Up, known as North Up mode. While in North Up mode, the vehicle icon follows the north

direction on the map regardless of which direction the vehicle is travelling.



Select this screen symbol to switch Heading Up, North Up, and 3-D modes.

This heading up symbol indicates the map with the vehicle travel direction up, known as Heading Up mode. While in Heading Up mode, the direction the vehicle is travelling will always be at the top of the map screen. The shaded triangle indicates the North direction. The vehicle icon will always be headed in the direction the vehicle is travelling.

Press this screen symbol to change to 3-D mode.

The symbol for the 3-D function is the same as the Heading Up symbol, but shows the map in a 3-D view.



The No GPS symbol appears when the vehicle is acquiring or not receiving a Global Positioning System (GPS) satellite signal.

See Global Positioning System for more information.



Select the Add screen button to store the location on the screen in your address book.


The system automatically stores the point in the address book. See “Address Book” under Destination for more information.

### Displaying Points of Interest (POI) on the Map Screen




Select the POI screen button to display or remove POI icons from the map.

Displaying POI icons on the map indicates where POIs (e.g., restaurants, petrol stations) are located. This screen appears after selecting the POI screen button.

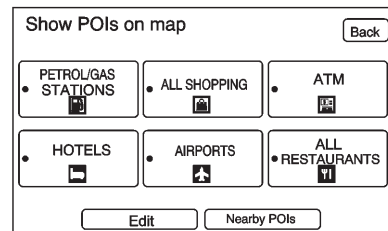

Select one of the POI categories to display or to remove POI icons from the map screen. When a category is selected those POI icons display on the map.

**Edit:** Select to change one of the current POI categories. Press the Edit screen button, select the POI category to be changed, then select the new category.

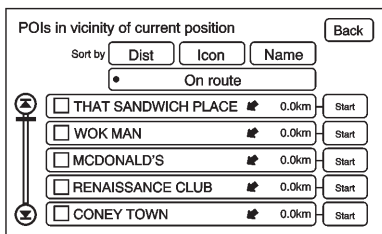

**Nearby POIs:** Select to display the list of available POIs for the selected POI categories. The list provides the POI icon, the name, the direction, and the distance to the POI from the vehicle's current position. Use the scroll arrows to move up and down the list. Use the Sort by Dist (distance), Icon, Name, and, on Route as desired.

**Go:** Press this screen button, next to the desired POI, to make this POI a destination or a waypoint.

Select a POI name to receive information about the POI. From this screen you can select: Add, to add this POI to the address book, Go, or Map.


**Add:** Press to add this POI to the address book. See "Address Book" under *Destination* on page 39 for information on address book entries.

**Map:** Press to display the map showing the location of the POI.

### Driving on a Route

When a destination has been routed and while driving on route, the map screen automatically displays the next manoeuvre.

This next manoeuvre pop-up displays the next manoeuvre direction and how many miles or kilometres the vehicle is from it.

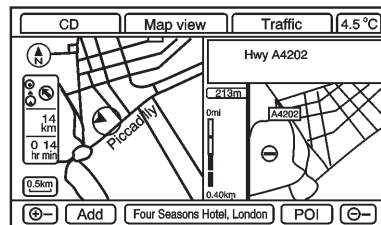

When approximately 0.4 km (1/4 mi) from the next manoeuvre, the screen displays the name and a detailed view of the next manoeuvre.

### Auto Reroute

When the destination is set and the vehicle is not travelling the planned route, the system automatically plans a new route and begins to reroute. The new route is highlighted on the screen.

## Destination

Press the DEST button to access the Select Destination screen. From this screen, select from several options to plan a route by entering destinations.

## Address Entry

**Street:** The address entry destination method allows entry of an address by providing the system with a street name, or a city name.

If having trouble finding a city or a street name:

- Enter the street name first instead of the city name, or vice versa.
- Enter more characters or reduce the amount of characters to reduce or expand the available options.

## Entering the Street Name First

1. Press DEST.
2. Press the Street screen button.

3. The Street category is automatically selected for entry. Start entering the street name.

It is recommended that directional information or street type is not entered. Use the Space screen button between street or city names. Use the backspace ◀ screen button if an incorrect character has been entered.

- If four or less names are available for the entered characters, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available streets. Press the List button to view the list and select a street.

- While the Street name category is empty, there is a Last 5 Streets screen button that displays the last five selected streets. Press this button to select a street from the list.
4. Select the street name.
  5. Enter the house number. The system displays the house number range that is available for the street.
  6. If there is more than one city, the list of cities that have that street address displays. Select a city from the list.
  7. A confirmation screen displays with the address. If the address is correct, select the Go screen button. The system calculates the route.
  8. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.

9. Press the Start Guidance screen button. The route is now ready to be started.

See “Getting Started on Your Route” in this section.

### Entering the City Name First

1. Press DEST.
2. Press the Street screen button.
3. Press the City screen button and start entering the city name.

If four or less names are available for the entered characters, a list displays.

If more than four are available, there is a match counter with a number in it, it represents the number of available cities. Press the List button to view the list and select a city.

4. Start entering the street name.

It is recommended that directional information or street type is not entered.

Use the Space screen button between street or city names. Use the backspace ◀ screen button if an incorrect character has been entered.


- If four or less names are available for the entered characters, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available streets. Press the List button to view the list and select a street.
- While the Street name category is empty, there is a Last 5 Streets screen button that displays the last five selected streets. Press this button to select a street from the list.

5. Select the street name.




6. Once a street has been selected, the numeric keyboard displays, allowing entry of the house number. The system displays the house number range that is available for the street.
  7. A confirmation screen displays with the address. If the address is correct, select the Go screen button. The system calculates the route.
  8. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
  9. Press the Start Guidance screen button. The route is now ready to be started.
- See "Getting Started on Your Route" in this section.

### Point of Interest (POI)

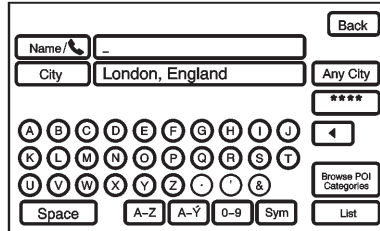

**Point of Interest:** The Point of Interest (POI) destination entry method allows selection of a destination by providing the system with a POI name, a city name, or selecting the POI from the POI list.

### Entering the POI Name/Phone Number

1. Press DEST.
2. Press the Point of Interest screen button.
3. The Name /  category is automatically selected for entry. Start entering the name or select the 0-9 screen button to enter the phone number.  
If four or less names are available, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available POI names. Press the List button to view the list.
4. Select the POI name from the list.
5. A confirmation screen displays with the POI information. If the POI information is correct, select the Go screen button. The system calculates the route.

## 42 Infotainment System

---


6. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
7. Press the Start Guidance screen button. The route is now ready to be started.

See “Getting Started on Your Route” in this section.

### Entering the City Name First

1. Press DEST.
2. Press the Point of Interest screen button.
3. Press the City screen button and start entering the city name.

If four or less names are available, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available cities. Press the List button to view the list and select a city.

4. Press the Name/  screen button and start entering the name or select the 0-9 screen button to enter the phone number.

If four or less names are available, a list displays. If more than four are available, there is a match counter with a number in it, it represents the number of available POI names. Press the List button to view the list.

5. Select the POI name from the list.
6. A confirmation screen displays with the POI information. If the POI information is correct, press the Go screen button. The system calculates the route.
7. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
8. Press the Start Guidance screen button. The route is now ready to be started.

See “Getting Started on Your Route” in this section.

### Selecting a POI Category

1. Press DEST.
2. Press the Point of Interest screen button.
3. Press the Browse POI Categories screen button.
4. Select a category, and then a sub-category.


The system will display available POI names in the selected sub-category.

5. Select the POI name from the list.
6. A confirmation screen displays with the POI information. If the POI information is correct, select the Go screen button. The system calculates the route.
7. Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.

- Press the Start Guidance screen button. The route is now ready to be started.

See “Getting Started on Your Route” in this section.

### Address Book

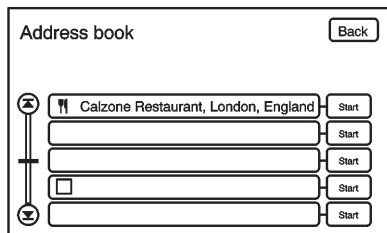

The address book entry method allows you to select a destination by selecting an address that has been stored in your address book.

- Press DEST.
- Press the Address Book screen button.

A list of your address book addresses display. Use the scroll arrows to the left to move through the list.


- Press the Go screen button next to the destination. The system calculates the route.
- Select the route preference (Fastest, Shortest, or Easy). The system highlights the route.
- Press the Start Guidance screen button. The route is now ready to be started.

See “Getting Started on Your Route” in this section for more information.


See “Adding Destinations to the Address Book” in this section.

### Getting Started on Your Route

Once a destination has been entered there are several functions that can be performed. Press DEST to access the Route screen.

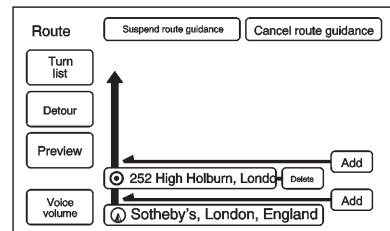


### Turn List

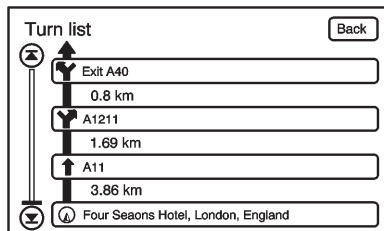

**Turn List:** Select this screen button, from the Route screen, to view the list of manoeuvres for the entire route.

### Route Preview

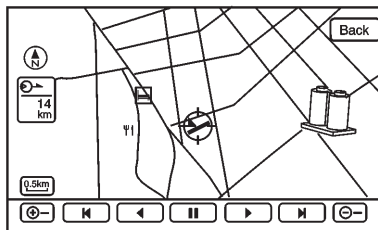

**Route Preview:** Press this screen button, from the Route screen, to preview the entire route in either direction.

◀ **(Reverse Skip):** Press to go back to the start point.

◀ **(Reverse Scroll):** Press to reverse scroll to the start point.

◀ **(Fast Reverse Scroll):** Press to fast reverse scroll to the start point. This button displays once the reverse scroll button has been selected.

|| **(Pause):** Press to pause the route preview, while in reverse, fast reverse, forward, or fast forward scroll.

▶ **(Forward Scroll):** Press to forward scroll to the final destination.

▶▶ **(Fast Forward Scroll):** Press to fast forward scroll to the final destination. This button displays once the forward scroll button has been selected.

▶| **(Fast Forward Skip):** Press to go to the final destination.

### Detour


Press this screen button from the Route screen, then select to detour 2, 5, 10, 20, or 40 km (1, 3, 5, 15, or 25 miles) from the current route.

Select Entire Route to detour the entire route. This option is only available while driving on a route.

### Voice Volume

Press this screen button from the Route screen to change the volume of voice prompts. Press the Voice Guidance, Traffic Event Voice Prompt, Speech Recognition Prompt, and Speech Confirmation Prompt screen buttons to turn voice prompts on or off for each voice category. See “Nav” under *Configure Menu on page 48* for more information.

### Add Waypoint

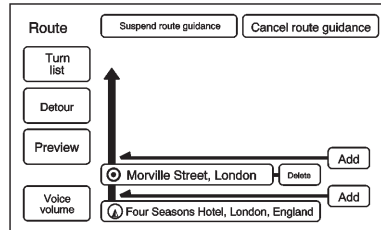

**Add:** Press this screen button from the Route screen. This feature allows up to three waypoints to be added to the current route, between one start point and final destination. Once a waypoint has been added, the points can be edited or deleted.

To add a waypoint:

1. Press DEST.
2. Press the Add screen button. This button only appears if a route has been calculated.

3. Using the desired method of entering a destination, enter the waypoint. See “Destination” for more information. The system calculates and highlights the route. The route is now ready to be started.
4. To add more waypoints, press DEST, then press the Add screen button where the next waypoint should fall on the route. The system calculates and highlights the route. The route is now ready to be started.

To delete a waypoint:

1. Press DEST.
2. Press the Delete screen button next to the waypoint to be deleted.
3. The system displays a pop-up confirmation message. Press Yes to delete the waypoint; press No to cancel this operation. The system calculates and highlights the route. The route is now ready to be started.

### **Suspend Guidance**

Press this screen button, from the Route screen, to put the current route on hold.

### **Resume Guidance**

Press this screen button, from the Route screen, to resume guidance on the current route.

### **Cancel Guidance**

Press this screen button, from the Route screen, to cancel the current route. A confirmation window is displayed. Select Yes to cancel; No to cancel this operation.

### **Preset Destinations - Adding or Changing**

This feature allows addition or changes to one of six preset destinations. When a destination has been added as a preset destination, it is available to select from the Select Destination screen. See "Preset Destination" for

information on how to select a preset destination as a final destination.

### **Storing the Current Destination**

To store the current final destination as a preset destination:

1. Press the Add screen button from the map screen. The Address Book screen appears.
2. Press the Name screen button. An alpha-keyboard displays. Enter the name.
3. Press and hold one of the six screen buttons at the bottom of the screen until the text within the button changes.

The name appears in that preset destination screen button and is now available to select from the Select Destination screen.

### **Adding or Changing Destinations**

1. Press DEST.
2. Press the Address Book screen button.

3. Select the address book entry to add or change.
4. Press and hold one of the six screen buttons at the bottom of the screen until the text within the button changes.

The name appears in that preset destination screen button and is now available to select from the Select Destination screen.

### **Address Book - Storing Destinations**

To store the current final destination to the address book, press the Add screen button from the map screen while touch-tapping to the final destination. The system automatically saves the final destination information in the address book.

## Address Book - Editing and Deleting Entries

Address book		Back
Icon	☺	Delete
Name	Calzone Restaurant	Map
Location	66 Heath St. Hampstead	More Locations
Phone number	020 7794 6775	Call
Add Voice-Tag		Start
Press and hold to make favorite destination.		
Mirage		

To edit the name of an address book:

1. Press DEST.
2. Press the Address Book screen button. A list of address book entries will display. Use the touch-tap arrows to the left to move through the list.
3. Select the address book entry to change.

4. Press Name and use the alpha keyboard to edit or add the name.
5. Press the OK screen button to save the changes.

To add or change the phone number of an address book entry:

1. Press DEST.
2. Press the Address Book screen button. A list of address book entries display. Use the touch-tap arrows to the left to move through the list.
3. Select the address book entry to change.
4. Press the Phone # screen button and use the numeric keyboard to enter or change the phone number.
5. Press the OK screen button to save your changes.

To change the map icon of an address book entry:

1. Press DEST.
2. Press the Address Book screen button. A list of address book entries display. Use the touch-tap arrows to the left to move through the list.
3. Select the address book entry to change.

4. Press the Icon screen button.
5. Select an icon from the list.

To add a voice tag to an address book entry:

1. Press DEST.
2. Press the Address Book screen button. A list of address book entries display. Use the touch-tap arrows to the left to move through the list.
3. Select the address book entry to change.
4. Press the Add Voice Tag screen button.

5. The system asks that you state the name. You will have two seconds to state the name. The system responds back with the name.

To delete an address book entry:

1. Press DEST.
2. Press the Address Book screen button. A list of address book entries display. Use the touch-tap arrows to the left to move through the list.
3. Select the address book entry to delete.
4. Press the Delete screen button to delete the address book entry. A confirmation displays.


### Previous Destinations - Deleting

To delete all previous destinations.

1. Press DEST.
2. Press the Previous Destination screen button.

3. Press the Delete All screen button. A confirmation window is displayed. Press Yes to cancel; No to cancel this operation.

### Configure Menu

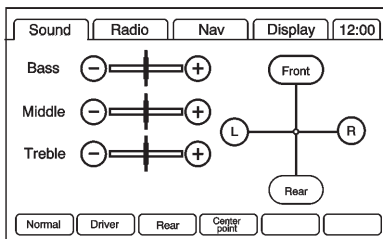

Press CONFIG to adjust several of the system's features and preferences. The last selected menu screen is the screen that displays; Sound, Radio, Nav (navigation), Display, or clock.

### Sound


Press CONFIG to enter the Menu options, then press CONFIG repeatedly until Sound is selected or press the Sound screen button to make speaker and DSP (Digital Signal Processing) adjustments. See *AM-FM Radio on page 10* for more information.

### Radio

Press CONFIG to enter the menu options, then press CONFIG repeatedly until Radio is selected or press the Radio screen button to make changes to radio information displayed, preset pages and Automatic Volume Control. See *AM-FM Radio on page 10* for more information.



## Nav (Navigation)

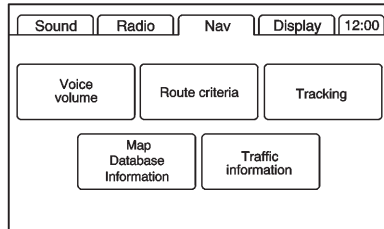

Press CONFIG to enter the Menu options, then press CONFIG repeatedly until the Nav screen button is selected or press the Nav screen button.

### Voice Volume

Press the Voice Volume screen button to change the volume of the voice prompts or to turn the voice prompts on and off.

**Master Volume Level:** Press the + or - screen buttons to increase or to decrease the volume of all voice categories.

**Voice Guidance:** Press to turn voice instructions on and off while travelling on a planned route. Voice guidance is on when the button is highlighted.

**Traffic Event Voice Prompt:** Press to turn traffic voice instructions on and off. Traffic voice is on when the button is highlighted.

**Speech Recognition Prompt:** Press to turn speech recognition prompts on and off. Speech prompts are on when the button is highlighted.

**Speech Confirmation Feedback:** Press to turn speech confirmation feedback on and off. Speech feedback is on when the button is highlighted.

### Route Preference

Press the Route Preference screen button to change route options when the system calculates a route.

**Avoid Freeway:** The system avoids major roads when calculating a planned route.

**Avoid Toll Road:** The system avoids toll roads when calculating a planned route.

**Avoid Ferry:** The system avoids ferries when calculating a planned route.

**Avoid Time and Seasonally Restricted Roads:** The system avoids time restricted and seasonal roads when calculating a planned route.

### Back Track

Press the Back Track screen button to turn recording and displaying on and off or to delete the path being travelled when not on a marked road.

**Record Back Track:** When this feature is active the system starts recording the path being travelled when not on a marked road. This button highlights when it is active.

**Display Back Track:** When this feature is active the system displays the path that is being travelled. This path is a simulation since the map database coverage will not have these roads on the system. This button highlights when it is active.

**Delete Recorded Back Track:**  
Press to delete the recorded path.

### Map Database Information

Press the Map Database Information screen button to view system information.

### Traffic Information

Depending on the region you are in, this feature may not be available.

The Traffic Message Channel (TMC) is available only through the FM Radio Data System (RDS). It is a

digital channel used for broadcasting real-time traffic information.

TMC information is received through the normal FM radio antenna. There is no need to wait for scheduled traffic announcements, or to listen to a specific program.


In order to receive traffic information, the vehicle must be within the reception range of an RDS-TMC station and the traffic information feature must be enabled.

The RDS-TMC traffic information feature and its menu options are available in the Traffic Information menu screen.

To access this menu:

1. Press CONFIG to display the Setup menu.
2. Press the Nav button at the top of the screen or press CONFIG repeatedly to access the navigation menu.

3. Press the Traffic Information screen button to display the traffic information menu.

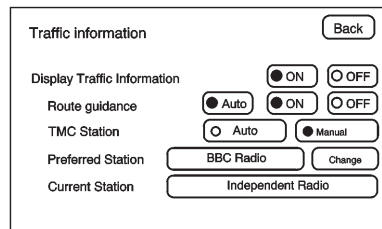

### Display Traffic Information

In the Traffic Information menu, press the ON or OFF button next to the Display Traffic Information to enable or disable the Traffic Information feature.

The indicator in the selected button will illuminate.

The other RDS-TMC options that appear on this screen are only available for selection if the Traffic Information feature has been enabled.

### Route Guidance

The RDS-TMC also offers traffic-related route guidance, while on a planned route, if it determines that a quicker route may be available. To enable traffic-related route guidance, press the Auto screen button or ON.

If Auto is selected, the system will automatically calculate a new route to avoid a traffic event.

If ON is selected, the system will notify you if an alternate route is available and will prompt to confirm whether it should calculate the alternate route.


To disable traffic-related route guidance, press OFF.

### TMC Station

Select Auto to automatically receive traffic information from the strongest available station. If Manual is selected, the system will enable the Preferred Station feature.

### Preferred Station

This feature is only available if TMC Station is set to Manual. To change the preferred station, press the Change button. The system will display the TMC Stations screen. Use the up and down arrows to scroll through the list. Select the preferred station from the list.

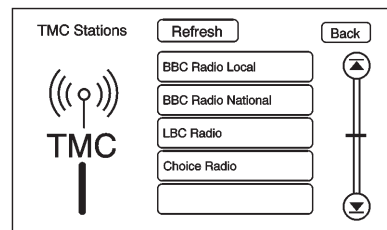

Press Refresh to refresh the list. Press Back to return to the previous screen.

### Current Station

The display line next to this item shows the current station.

### Traffic Event Locations and Information

If the Traffic Information feature is enabled, the system will receive traffic event data and will display event icons in their locations on the map screen.

## 52 Infotainment System

Traffic flow conditions will also appear on the map screen.

Traffic flow conditions will be indicated by a coloured line on the side of the mapped road that is affected by the condition.

- A green line indicates free traffic flow.
- A yellow line indicates traffic congestion.
- A red line indicates heavy or stopped traffic.


Some systems may only display red traffic flow conditions.

A TMC menu button will also be available at the top of the map screen, next to the audio source menu screen button (if available) and the Full Map screen button.

If, while driving on a planned route, the navigation system receives traffic event data that may impact your route, a vehicle icon will appear on the TMC menu screen button.

The vehicle icon will be colour coded:

- Green indicates the traffic event is far away.
- Yellow indicates a minor traffic event is in the general area.
- Red indicates, while under route guidance, a quicker route is available.

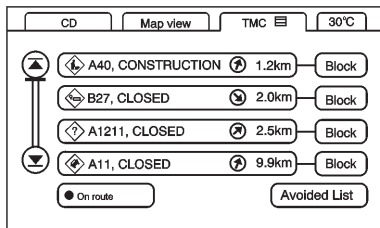

Press NAV repeatedly or press the TMC menu screen button to access the TMC event data display.

The system will display a list of all received traffic events within a set distance.


The list will indicate the direction and distance of each traffic event from the vehicle's current position.

Not all traffic events may be reported in the list.

The events are listed in order of distance from your current vehicle position.

If an up or down arrow screen button is highlighted on the screen, press it to scroll up or down through the displayed list.

If currently travelling on a planned route, you can filter the list to display only the traffic events along the route. To filter the list, select On Route.

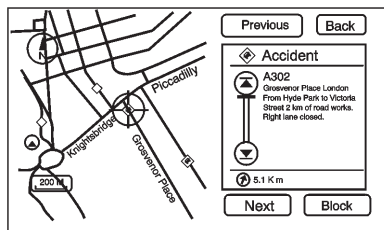

Select a traffic event from the list to view it on the map. The map screen will display with the area of the traffic event shown.

Press Next or Previous, or the up or down arrows displayed in the same location, to move through the map displays of the listed traffic events.


## Avoiding Traffic Events

Route guidance must be active and the traffic event must be on your route in order for the Avoid feature to work. Press the Avoid screen button next to the traffic event that

you would like to avoid. The current route will be updated to avoid the area with the traffic event.

Multiple traffic events can be avoided, however they must be selected one at a time.

If at least one traffic event has been avoided, the Avoided List screen button can be pressed to view a list of the avoided traffic events.

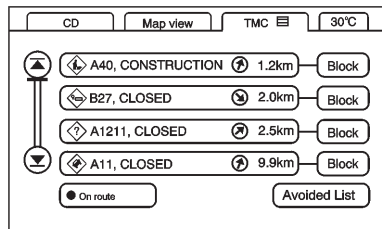

The Avoided List screen button is available on the TMC menu screen button's event data display. Press the Use button next to an avoided

traffic event in the Avoided List display to place the event back on your route.

## Scrolling the Map

While scrolling the map, traffic event icons could appear. To receive information about a traffic event, place the scroll cross-hairs over the traffic event icon.

The **i** (Information) symbol appears. Press this button to display the traffic event information, including the type of traffic event, the street name, and a description of the traffic event. See "Scrolling the Map" under *Maps on page 32*.

## Alternate Route

One of the following pop-up displays could appear on the screen:

- Detour Available.
- A Quicker Route is Available. Reroute?

These displays indicate that a possibly quicker route, detouring around a traffic event, is available.

## 54 Infotainment System

---

Press Yes or Reroute to calculate the new route. This option may only be available when the vehicle icon on the TMC menu screen button is red.

The RDS-TMC information may not be provided for the alternate route, depending on what type of road is being travelled on.

### Traffic Event Icons

The following are traffic condition symbols that may display:



Stopped traffic.



Traffic jam.



Accident.



Road closed.



Lane Narrows.



Road work. Construction.



Alert.



Road condition.




Road visibility.



Other.

### Display

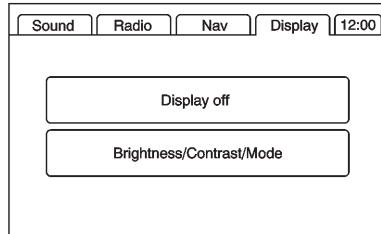

Press CONFIG to enter the menu options, then press CONFIG repeatedly until Display is selected or press the Display screen button.

#### Display Off

Press this screen button to turn the display off. Press any button such as NAV, AUDIO, FAV, CONFIG, DEST, SCREEN or TONE to view the display.

### Brightness/Contrast/Mode

Press this screen button to change the brightness, contrast, and mode of the display.

**Brightness:** Press the + (plus) or - (minus) screen buttons to increase or decrease the brightness of the screen.

**Contrast:** Press the + (plus) or - (minus) screen buttons to increase or decrease the contrast of the screen.

**Auto (Automatic):** Press to automatically adjust the screen background depending on exterior lighting conditions.

**Day:** Press to make the map background brighter.

**Night:** Press to make the map background darker.

The dimming change button on the navigation faceplate is used to toggle between these dimming modes.

### Setting the Clock

The navigation system time and the analogue clock are separate features. Changing the time through the navigation system will not change the time on the analogue clock and vice versa. See “Analogue Clock” in the owner manual.

To set the time:

1. Press the CONFIG button to enter the menu options, then press CONFIG repeatedly until the time is selected or press the clock screen button in the upper right corner of the screen.
2. Press the Hours and Minutes - (minus) and + (plus) signs to decrease and to increase the time.

**12/24 HR Format:** Select the 12 HR screen button for standard time; select the 24 HR screen button for military time.

**DD/MM or MM/DD Format:** Press the + or - display buttons to increase or decrease the MM, DD, and YYYY date display.

**Auto GPS Update:** Press either the On or Off display buttons. If On, the GPS update feature automatically updates the date and time.

**Daylight Savings:** Press either the On or Off display buttons. Press On to jump ahead for daylight savings time. Press Off to fall back out of daylight savings time.

**Time Zone:** Auto GPS Update must be off before the time zone can be changed. Select the change display button to select the desired time zone.

### Global Positioning System (GPS)

The navigation system determines the position of the vehicle by using satellite signals, various vehicle signals, and map data.

At times, other interferences such as the satellite condition, road configuration, the condition of the vehicle and/or other circumstances can interfere with the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of the vehicle using signals sent by the GPS Satellites. When the vehicle is not receiving signals from the satellites, a symbol appears on the map screen. Refer to Symbols.

This system may not be available or interferences may occur if any of the following is true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Objects are on the rear shelf of the vehicle.
- Satellites are being repaired or improved.
- After-market glass tinting has been applied to the vehicle's rear windshield.



**Notice:** Do not apply after-market glass tinting to the vehicle's windows. Glass tinting interferes with the system's ability to receive GPS signals and causes the system to malfunction. The window might have to be replaced to correct the problem. This would not be covered by the warranty.

For more information if the GPS is not functioning properly, see *Problems with Route Guidance on page 58* and *If the System Needs Service on page 58*.

## Vehicle Positioning

At times, the position of the vehicle on the map may be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as in sand, gravel and/or snow.

- The vehicle is travelling on winding roads.
- The vehicle is on a long straight road.
- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has just been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is travelling at high speed.
- The vehicle changes directions more than once, or when the vehicle is turning on a turn table in a car park.
- The vehicle is entering and/or exiting a car park, garage or a plot of land with a roof.
- The GPS signal is not received.
- A roof carrier is installed on the vehicle.
- The vehicle has tyre chains installed.
- The tyres are replaced.
- The tyre pressure is incorrect.
- The tyres are worn.
- The first navigation use after the map data is updated.
- The battery is disconnected for several days.
- The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

If experiencing problems with the system, it may need to be calibrated. See "DIC Compass" in the owner manual.

### Problems with Route Guidance

Inappropriate route guidance may occur under one or more of the following conditions:

- You have not turned onto the road indicated.
- Route guidance may not be available when using automatic rerouting for the next right or left turn.
- The route may not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Plural names of places may be announced occasionally.
- It may take a long time to operate automatic rerouting during high-speed driving.

- Automatic rerouting may display a route returning to the set waypoint if heading for a destination without passing through a set waypoint.
- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes may not be searched.
- The route to the destination may not be shown if there are new roads, if roads have recently changed or if certain roads are not listed in the map data. See *Ordering Map DVDs on page 58*.

### If the System Needs Service

If the navigation system needs service and the steps listed here have been followed but there are still problems, see your dealer for assistance.

### Ordering Map DVDs

The map data in the vehicle is the most up-to-date information available when the vehicle was produced. The map data is updated periodically, provided that the map information has changed.

If you have any questions about the operation of the navigation system or the update process, contact your dealer.

After receiving the updated disc, see “Installing the DVD Map Disc” and “Ejecting the DVD Map Disc” under *Maps on page 32*.

## Database Coverage Explanations

Coverage areas vary with respect to the level of map detail available for any given area. Some areas feature greater levels of detail than others. If this happens, it does not mean there is a problem with the system. As the map data is updated, more detail may become available for areas which previously had limited detail. See *Ordering Map DVDs on page 58*.

## Voice Recognition


### Speech Recognition

The navigation system's speech recognition allows for hands-free operation of navigation and audio system features.

Speech recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See “Retained Accessory Power (RAP)” in the Index of the vehicle owner manual for more information.

### Using Speech Recognition



1. Press and hold the  steering wheel control until a beep is heard. The audio system mutes.

While in the navigation screens, the system displays a symbol (X) while the speech recognition is active.

2. Clearly state one of the commands listed under Speech Help.

### Cancelling Speech Recognition

Press the Mute/Voice button while using speech recognition. Press it again to turn speech recognition back on.

### Overview

1. Press INFO to enter the menu options, press INFO repeatedly until Speech Help is selected or press the Speech Help screen button.
2. Press the Overview screen button. Available features in the system gives explanation of how to use the feature. A list of questions/categories display.

3. Press the question/category to learn how to use speech recognition.

A command may be invalid if it does not recognise the command or if it cannot perform the command due to not being in an appropriate area for that command, the system states "Invalid Command".

### Commands

Press INFO to enter the menu options, press INFO repeatedly until Speech Help is selected or press the Speech Help screen button. Press one of the following command categories to view the list of speech commands for that category.

**Common Commands:** These commands are available anytime.

**Top Level Commands:** All commands can be stated at each main menu.

**Map Commands:** Available when the map screen is displayed. When a split screen, Audio/Map, is displayed, the map commands are not available.

**Guidance Commands:** Available when driving on a route.

**Radio Commands:** Available when listening to AM or FM stations.

**Disc Commands:** Available when a CD, MP3, or DVD is loaded.

**HDD (Hard Drive) Commands:** Available when listening to music or audio books that are on the hard drive.

### AUX (Auxiliary Device)

**Commands:** Available when an auxiliary device is being used.

## Trademarks and Licence Agreements



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2011 DTS, Inc. All Rights Reserved.



Gracenote® is a registered trademark of Gracenote, Inc.

The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, visit [www.gracenote.com](http://www.gracenote.com).

### Microsoft® Licence Agreement

Read the following for more information on the software licence agreement between GM and affiliated companies of Microsoft® Corporation:

The vehicle has the Navigation System. It includes software licensed by GM from an affiliate of Microsoft® Corporation ("MS"). The installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENCE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT GM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A

REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

This EULA grants you the following licence to use the SOFTWARE only on the DEVICE.

THE SOFTWARE IS NOT FAULT TOLERANT. GM HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON [COMPANY] TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.

THE SOFTWARE is provided "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU.

ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN

IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS, MICROSOFT CORPORATION AND/OR THEIR AFFILIATES BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).

If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither GM nor its suppliers shall be liable for any damages arising out of errors in the speech recognition process.

You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

The SOFTWARE may permit GM, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE (“Supplemental Components”).

- If GM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.
- If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the MS, Microsoft Corporation or affiliate entity providing the

Supplemental Component(s) shall be the licensor of the Supplemental Component(s).

- GM, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

If SOFTWARE is provided by GM separate from the DEVICE on separate media and labelled "Recovery Media" you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.

If the SOFTWARE is provided by GM separate from the DEVICE on separate media or via web download or other means, and is labelled "For Upgrade Purposes Only" you may install one (1) copy of such SOFTWARE onto the DEVICE as a replacement copy for the existing SOFTWARE, and use it

in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

Without prejudice to any other rights, GM or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or suppliers. The SOFTWARE is licensed, not sold. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property

rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

This EULA does not grant you any rights in connection with any trademarks or service marks of GM, MS, Microsoft Corporation, their affiliates or suppliers.

Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to GM support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact GM for any other reason, please refer to the address provided in the documentation for the DEVICE.

You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

You acknowledge that SOFTWARE is subject to U.S. and European Union export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://microsoft.com/exporting/>.



**A**

Address Book - Editing and  
 Deleting Entries ..... 47

Address Book - Storing  
 Destinations ..... 46

Address Entry ..... 39

Alpha-Numeric Keyboard ..... 32

Alternate Route ..... 53

AM-FM Radio ..... 10

Audio Players  
 CD/DVD ..... 15  
 MP3 ..... 20

Audio System  
 Hard Drive Device (HDD) ..... 24

Auto Reroute ..... 38

Auxiliary  
 Devices ..... 28

Avoiding Traffic Events ..... 53

**B**

Background Recording ..... 27

**C**

Cancelling Guidance ..... 9

Cancelling Speech  
 Recognition ..... 59

CD Eject ..... 28

CD/DVD Messages ..... 19

CD/DVD Player ..... 15

Cleaning the Display ..... 9

Commands ..... 60

Compressed Audio ..... 27

Configure Menu ..... 48

**D**

Database Coverage  
 Explanations ..... 59

Deleting Personal Information .... 6

Destination, Navigation ..... 39

Devices  
 Auxiliary ..... 28

Display ..... 55

Displaying Points of Interest  
 (POI) on the Map Screen ..... 37

Driving on a Route ..... 38

Duplicate Content ..... 27

DVD/CD Player ..... 15

**E**

Ejecting the DVD Map Disc ..... 33

English and Metric Unit  
 Conversion ..... 6

Entering an Address and Point  
 of Interest and Storing Preset  
 Destinations ..... 6

**F**

Finding a Station ..... 10

**G**

Getting Started on Your Route ... 43

Global Positioning  
 System (GPS) ..... 56

Gracenote Database ..... 30

**H**

Handling the DVD Map Disc ..... 33

Hard Drive Device (HDD) ..... 24

**I**

Installing the DVD Map Disc ..... 33

Introduction ..... 3

**L**

Language ..... 6

**M**

Map Adjustments ..... 34

Map Coverage ..... 32

Map Scales ..... 34

Maps ..... 32

Menu

    Configure ..... 48

Microsoft® Licence

    Agreement ..... 61

MP3 ..... 20

Music Navigator Screen ..... 26

**N**

Nav (Navigation) ..... 49

Navigation

    Destination ..... 39

    Symbols ..... 35

    Using the System ..... 31

Navigation Controls Buttons ..... 31

**O**

Ordering

    Map DVDs ..... 58

Overview ..... 59

Overview, Infotainment System ... 3

**P**

Playing a CD ..... 15

Playing a DVD ..... 16

Playing the Radio ..... 10

Point of Interest (POI) ..... 41

Power Mode ..... 28

Preset Destinations - Adding

    or Changing ..... 46

Previous Destinations -

    Deleting ..... 48

Problems with Route

    Guidance ..... 58

**R**

Radio ..... 48

Radio Menu ..... 12

Radios

    AM-FM Radio ..... 10

    CD/DVD Player ..... 15

Recording from a CD ..... 24

Recording from a USB Device ... 24

**S**

Saving HDD Favourites ..... 28

Scrolling the Map ..... 34, 53

Setting the Clock ..... 56

Sound ..... 48

Sound Menu ..... 11

Speech Recognition ..... 59

Storing Radio Station

    Presets ..... 6, 11

Symbols, Navigation ..... 35

System Needs Service, If ..... 58

**T**

Timeshift ..... 14

Touch-Screen Buttons ..... 32

Traffic Event Icons ..... 54

Traffic Event Locations and

    Information ..... 51

Traffic Information ..... 50

**U**

USB Background Recording .....	29
USB Host Support .....	28
USB Media Recording .....	29
USB Playback .....	29
USB Supported Devices .....	28
Using an MP3 CD and DVD .....	20
Using Speech Recognition .....	59
Using the Radio Controls to Connect and Control Your iPod® .....	29
Using the Stored Preset Destinations .....	9

**V**

Vehicle Positioning .....	57
Voice Guidance .....	9
Voice Recognition .....	59

